


Daggerboard Snubber

1. Tape sheet to deck, align with center of slot.
2. Drill the 4 holes indicated with 1/8" bit.
3. Mount aluminum caps with #8 x 1" Stainless Steel Oval Head screws in the 4 holes, and carefully drill the other 4 holes with the caps as guides, keeping drill vertical.
4. Remove the caps, clean up any drilling residue, and mount caps over the rubber blades. If the blades move when the caps are tight, then install the enclosed spacers UNDER the blades. In this case, the metal caps will have a gap to the deck when the screws are tight. DO NOT OVER TIGHTEN, snug is good enough.
5. Board will be 'sticky' when dry, but should slide more easily when wet. If still sticky, lightly scuff edges of blades with fine sandpaper.

THE  **butterfly.**

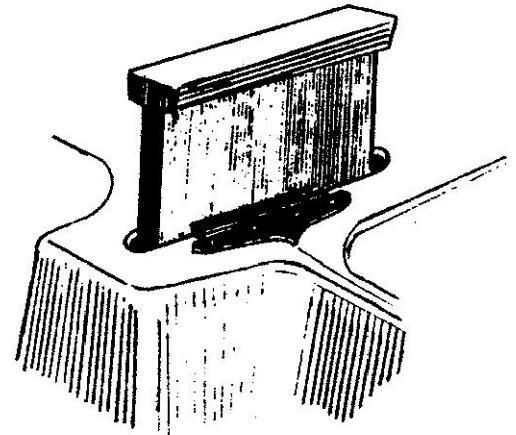

FOREWORD
↑
ALIGN WITH CENTER OF
DAGGERBOARD SLOT

CENTER
OF COAMING RIDGE

ALIGN WITH EDGE OF DECK

1/8"
2 3/8"

BARNETT

© 2010
Barnett Marine Sports Inc
1180 Port Rd.
Port Edwards WI 54469